


FLOOR VENT COVER GENERAL INSTALLATION GUIDE

Installing the flush to floor vents is easy to do for tile, hardwood, or laminate flooring.

■ INSTALLATION

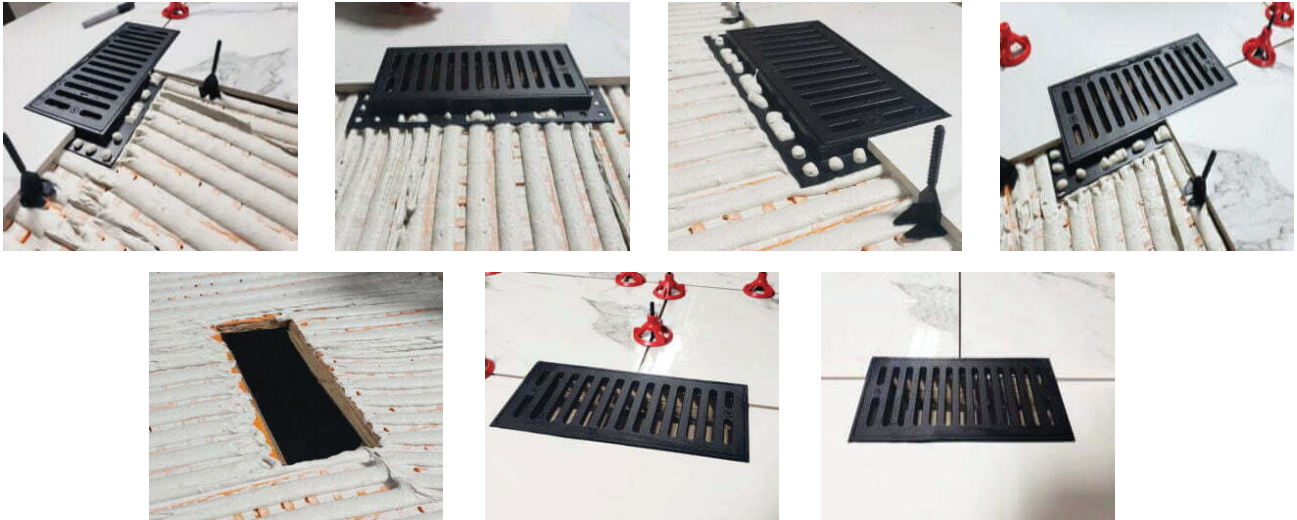


This Vents can be used with nearly any type of flooring material. Including Ceramic Tile, Stone, Laminate, Wood, LVP, and Carpet. With our unique flush mount frame design and grill insert, you get the perfect smooth transition finish every time.

Metal vents are manufactured with high strength aluminum, providing outstanding toughness and strength for not only residential jobs but also conform to most commercial specs as well.

We are constructed out of two components, the outside flush mount frame, and the grill insert. The grill insert of the registers can easily be removed for cleaning of the duct area and are completely interchangeable for different looks.


Our Metal Frames are 1/2" thick allowing most tile flooring to be installed with a perfect flush mount finish. Easy installation makes this the perfect product for DIY homeowners or skilled craftsman.

Installation Guide with Leminat/LVP/Hardwood

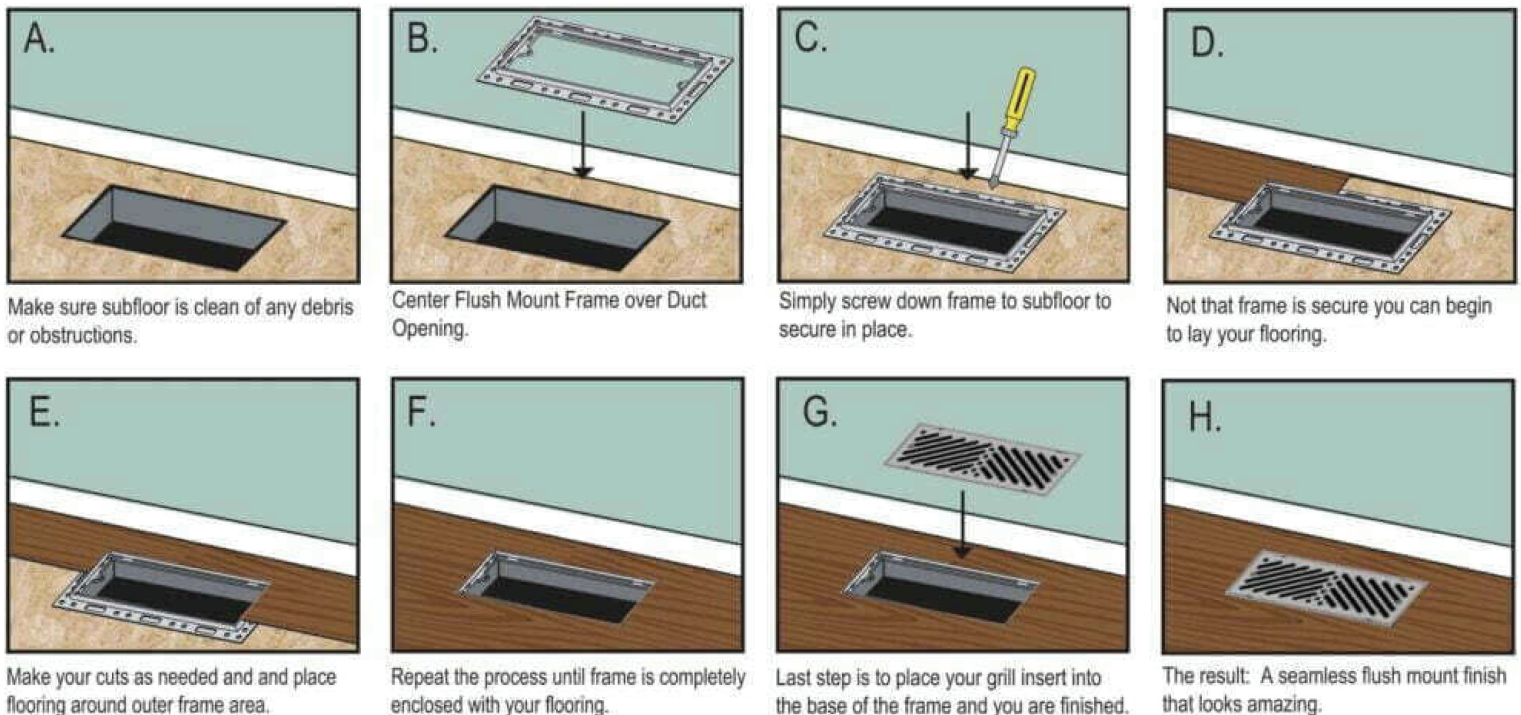


FLOOR VENT COVER GENERAL INSTALLATION GUIDE


Installation Guide with Tile Flooring

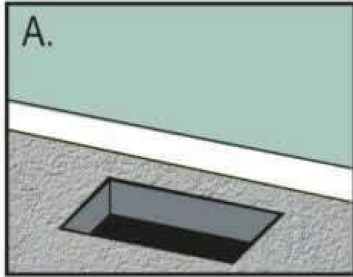


A.
Make sure subfloor is clean of any debris or obstructions.

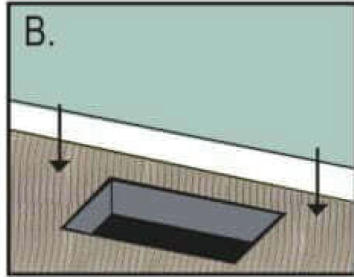


B.
For Tile & Stone Installation apply your setting material to the subfloor.

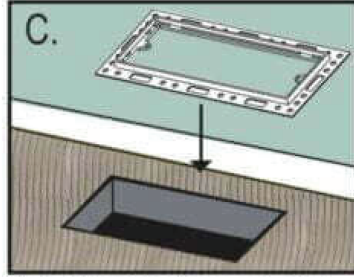


C.
Center Flush Mount Frame over Duct Opening.

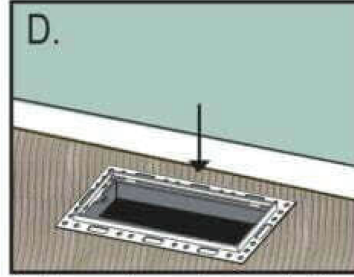


D.
Gently press down on the frame to allow it to embed into the setting material.

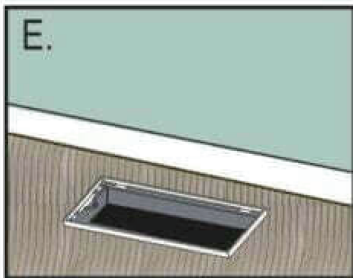

E.
Trowel your setting material over the outer frame area and you are now ready for tile.

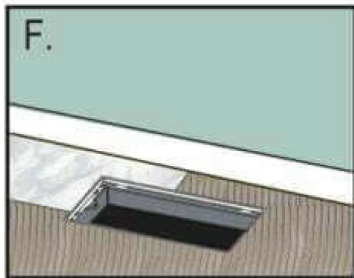


F.
Start making your tile cuts as needed and begin to place around frame.

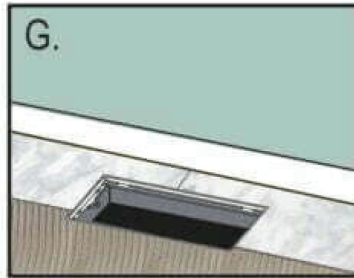


G.
Continue to set your tiles around the frame area.




H.
Repeat the process until frame is completely enclosed with your tiles.

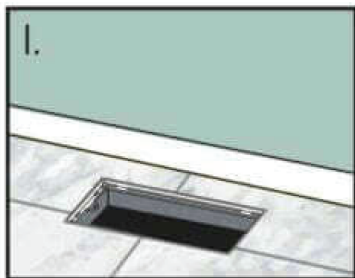

I.
Tile is finished and you are now ready for the last step.

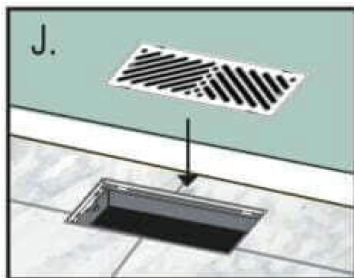

J.
Last step is to place your grill insert into the base of the frame and you are finished.

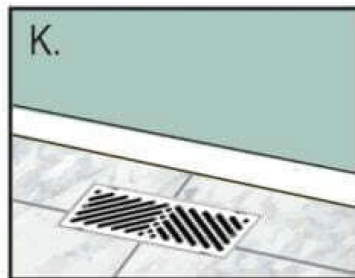

K.
The result: A seamless flush mount finish that looks amazing.

STEP 1:

To begin installation make sure you have the correct size vent you need for your duct opening. To find out what size you will need, all you need to do is measure the duct openings length and width.

STEP 2:

So now that you have the right size vent, our next step is to have a clean substrate or (subfloor). Make sure the area is clean of any debris or obstructions.



FLOOR VENT COVER GENERAL INSTALLATION GUIDE

STEP 3:


Once you have your substrate cleaned and prepped, you are now ready for the outer frame. Simply apply your thinset to the sub floor area and place your flush mount frame over the duct opening and center as needed. Make sure to gently press down on the frame to allow it to embed into the setting material.

STEP 4:

Next all you need to do is trowel your setting material over the outer frame area and you are ready for tile.

STEP 5:

Make your tile cuts as needed, then simply set your tile around the flush mount frame. Lastly add the grill insert and you are done. The result: a seamless flush mount finish that looks amazing.

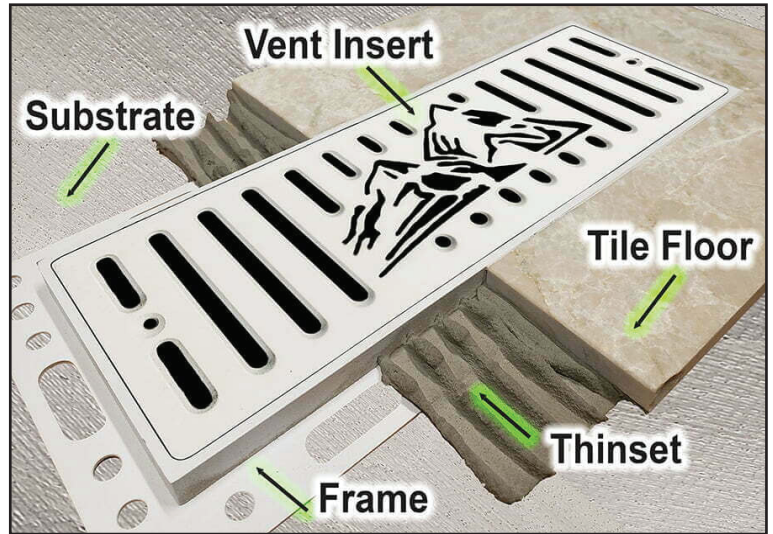

STEP 6:

If you are installing any other hard surface materials other than tile or stone, like Laminate, LVP, Hardwood, or Carpet, simply follow steps 1&2. When it comes to installing your frame to the subfloor all you need to do is center over the duct opening and simply use a couple screws to secure in place. Make your cuts to your flooring material, add around the frame, and drop in the grill insert and we are finished.

